

A1203-ADA-CF3 Flash Card Reader


Users Guide



USING THE FLASH CARD READER

- Step 1. Ground yourself to prevent ESD damage.
- Step 2. Unpack the Reader and check for damage.
- Step 3. If desired, mount the Reader using the four mounting holes and appropriate screws.
- Step 4. Install J7 **AND** slide S1 away from the SATA cable to Write to the Flash Card.

- Step 5. Remove J7 **OR** slide S1 toward the SATA cable for Read Only operation.
- Step 6. Connect the Power and SATA cables.
- Step 7. Insert the CompactFlash™ card.
- Step 8. To verify operation, observe D1 and D5. D1 flashes during Read / Write operation. D5 is Red to indicate Read Only operation. D5 is Green to indicate Write Enable.

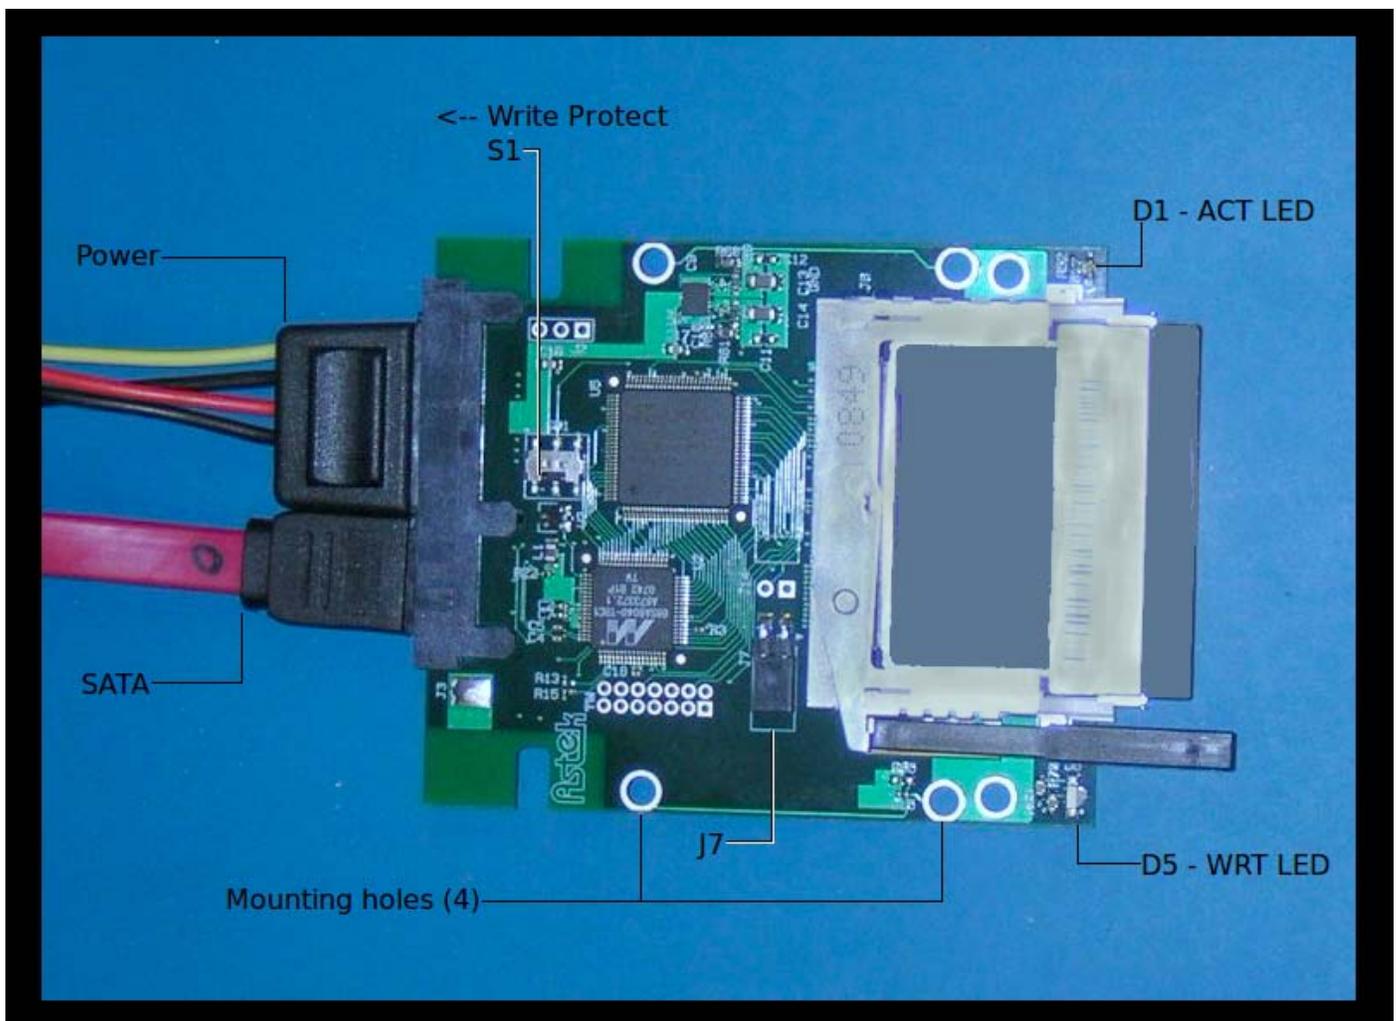

90-000168 Version A, October 27, 2009.

Visit Astek Corporation's web site for a list of products and support information:

<http://www.astekcorp.com/>

Astek logo design is a trademark of Astek Corporation.

CompactFlash™ is a registered trademark of SanDisk Corporation.

Copyright © 2009 by Astek Corporation. All rights reserved.

Astek Corporation reserves the right to make changes to any products and services herein at any time without notice.

Astek assumes no responsibility or liability arising out of the application or use of any product or service described herein, except as expressly agreed to in writing by Astek; nor does the purchase, lease, or use of a product or service from Astek convey a license under any patent rights, copyrights, trademark rights, or any other of the intellectual property rights of Astek Corporation or of third parties.