

HSIT Connector Saver Board 1394B

Users Guide

Version A
October 18, 2011



i. Revision History

Revision	ECO#	Date	Description
A	C00997	10/18/11	Initial Release

ii. Reference Documents

Document #	Title	Author
-	-	-

iii. Approval

Approver	Title	Approval Date
Joshua Sneller	Hardware Design Engineer	10/18/11

iv. Table of Contents

HSIT Connector Saver Board 1394B.....	1
Users Guide.....	1
1 Connections.....	4
2 Lines Tested @ Speed	4
3 Faceplate	5
4 Installing the Connector Saver.....	6
5 Replacing the Connector Saver Circuit Board	7
6 Contacting Astek Corporation	8

1 Connections

- 2x 1394B Beta Only

2 Lines Tested @ Speed

1394B	
TpA +/-	0.98304Gbps, 1.96608Gbps, or 3.93216Gbps
TpB +/-	0.98304Gbps, 1.96608Gbps, or 3.93216Gbps

DC Connections	
Vp	DC connection test only
GND	DC connection test only
Cable Shield GND	DC connection test only
Chassis GND	DC connection test only
TpA (R)	DC connection test only
TpB (R)	DC connection test only

3 Faceplate

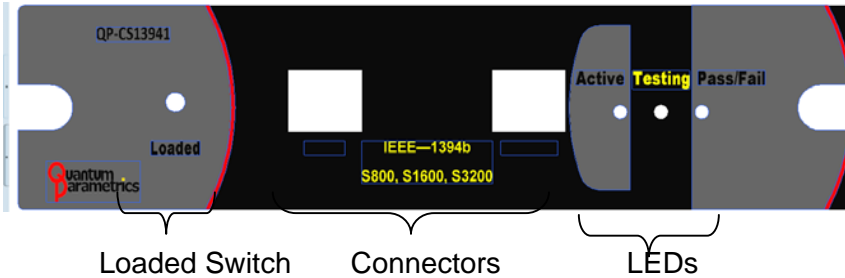


Figure 1 - Faceplate front view

- Loaded Switch—press the Loaded Switch after loading a 1394B cable to the device to begin testing.
- Connectors—this Connector Saver Module supports testing of 1394B beta only to 1394B beta only cables.
- LEDs
 - Active—indicates that the HSIT is powered and ready to be used or is in use.
 - Testing—blinks to indicate an ongoing test.
 - Pass/Fail—blinks red to indicate a failed test and green to indicate a passed test.

4 Installing the Connector Saver

1. The Connector Saver Module inserts into the front faceplate of the HSIT device.



Figure 2—Connector Saver Module and HSIT device

2. Align the board with the card guides mounted on the enclosure and slide the assembly into the enclosure. Be careful to insert the Connector Saver circuit board (NOT the metal bracket) into the plastic card guides in the HSIT device. (See the figure below.) Failure to insert the Connector Saver correctly can cause damage to the Connector Saver or the HSIT device.
3. Press firmly with both thumbs to cause the connector to click into place.
4. Secure the faceplate using the captive screws on the Connector Saver Faceplate.

NOTE: Ensure ESD safe practices when handling the Connector Saver device.



Figure 3 - CSB going into HSIT

5 Replacing the Connector Saver Circuit Board

1. Remove the Connector Saver Module by unfastening the captive screws on the faceplate and pulling firmly until the module clicks out of place.
2. Remove the screws attaching the metal bracket and the circuit board as shown in the figures below

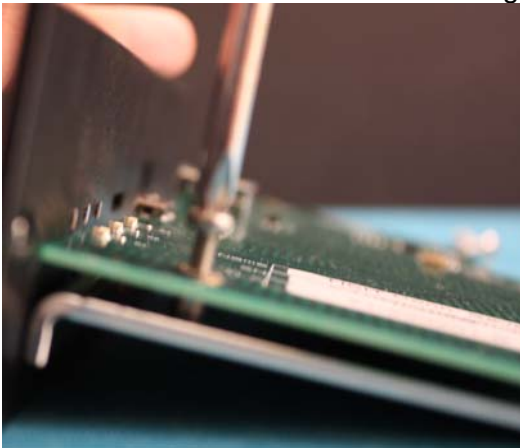


Figure 4 - Removing screws

3. The separate board and bracket should look like this:

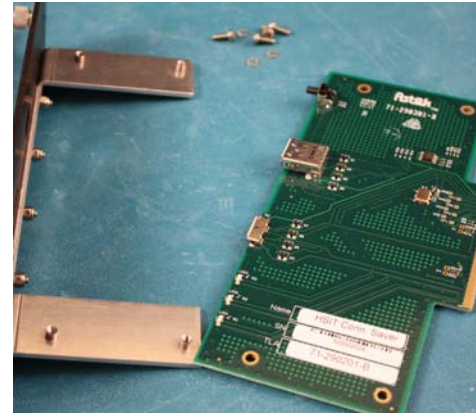


Figure 5 - CSB and Faceplate separated

4. Place and fasten the new board to the bracket with the name, serial number, and TLA number facing up and the golden connector contacts facing away from the faceplate.
5. Replace the Module into the HSIT device.

6 Contacting Astek Corporation

Astek Corporation
(D.B.A. Quantum Parametrics)

Astek may be contacted by phone at:

(719)260-1625 (USA)

or by email at:

sales@astekcorp.com or visit our web site at:

www.astekcorp.com/quantumparametrics